



Brellum Steel Bracelet


Ref BO.02

Size adjustment

November 2019

<https://www.brellum.swiss/en/services/users-manuals.html>

# 1. List of material

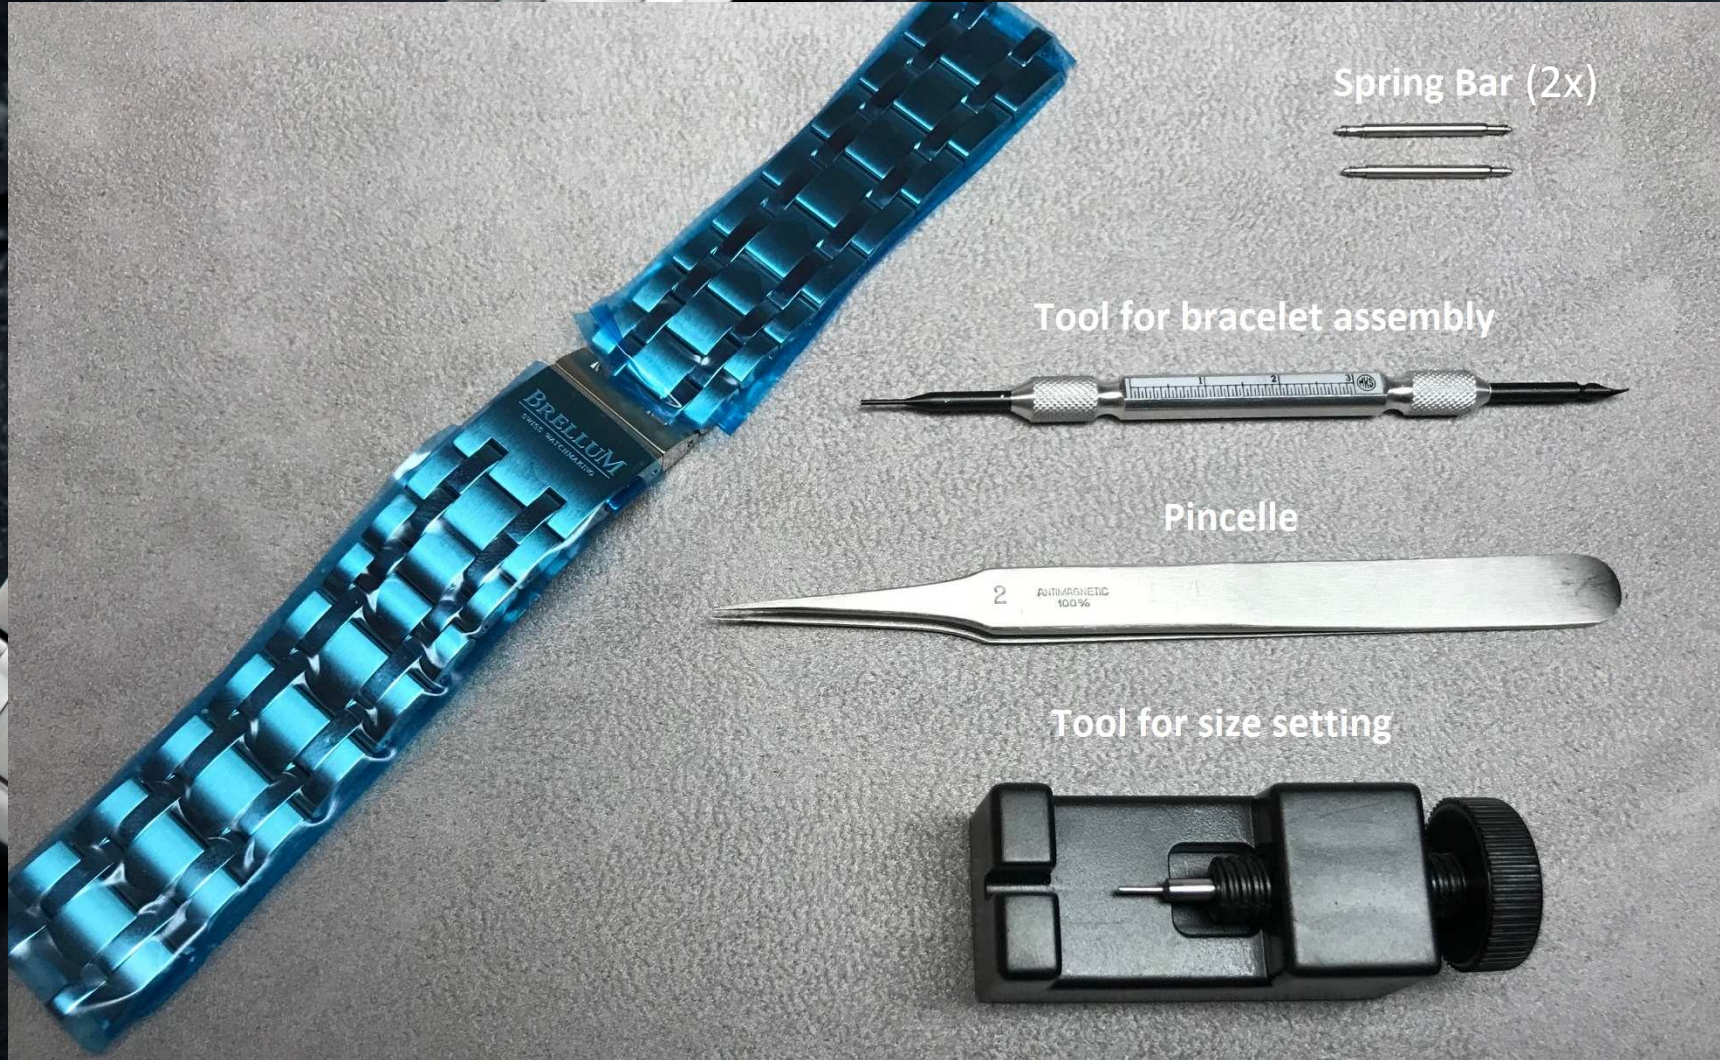



## 2. Before size adjustment

- Make sure you have good light
- Keep all labels on the bracelet during the size adjustment process
- Protect your workplace with a soft material
- Keep calm 😊
- If you can't do it, go through a watchmaker who will do it in just a few minutes.


### 3. Adjustment principle



1. Links are assembled with a Capsa Pin/Tube system
2. The bracelet equip adjustable links and half links for fine adjustment

3. follow the direction of the arrows to pull out the pin, and the opposite direction to raise the pin

## 4. Remove a link

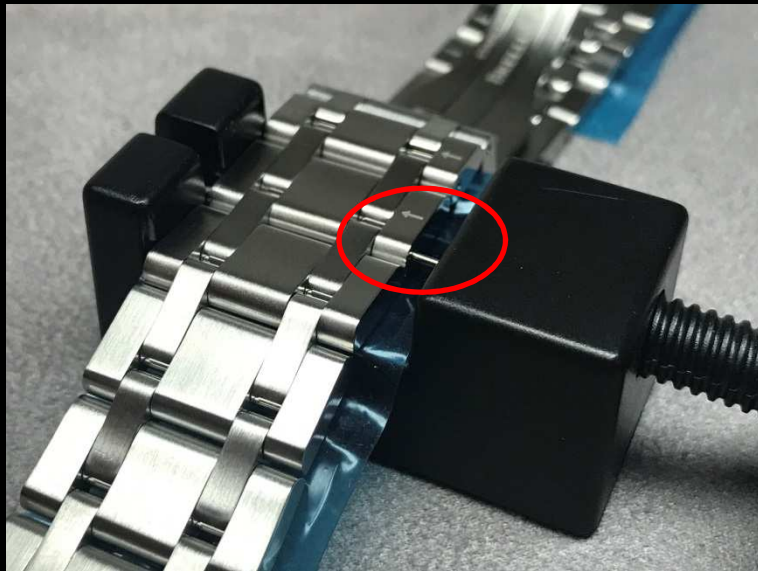

1. Unscrew the big screw of the plastic tool
2. Install the bracelet on the tool
3. Screw a bit the pin of the tool inside the hole, following the sens of arrows



4. Screws until contact with the bracelet, you can hear a small «click»



5. With the pincelle, remove the pin and the small tube inside the link

## 5. Closing the link



1. With the pincelle, replace the small tube inside the bracelet, well centered




2. With the pincelle, replace the pin inside the hole, the part with the small notch first

## 5. Closing the link



3. Introduce the pin gently as deep as possible with your fingers, moving a bit the links

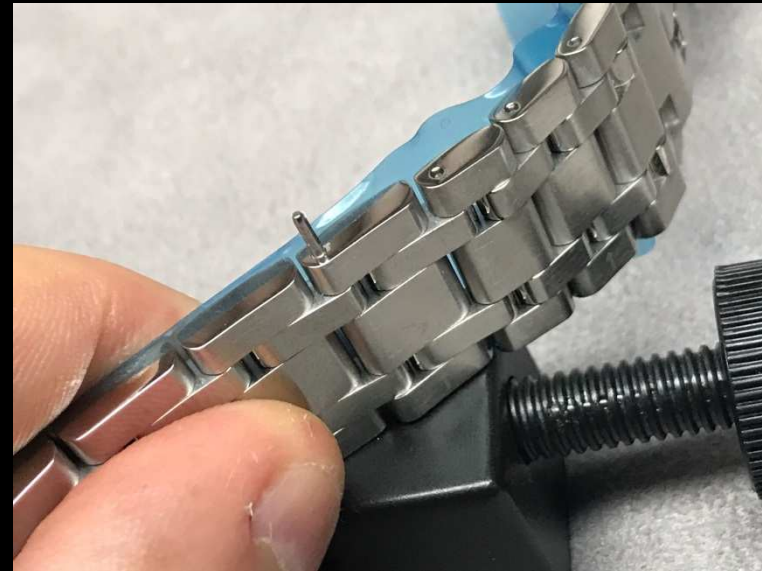


4. position the bracelet on the flat part of the plastic tool and hold it firmly

## 5. Closing the link



5. Press with the back of the pincelle, flat, until it is flush with the bracelet.

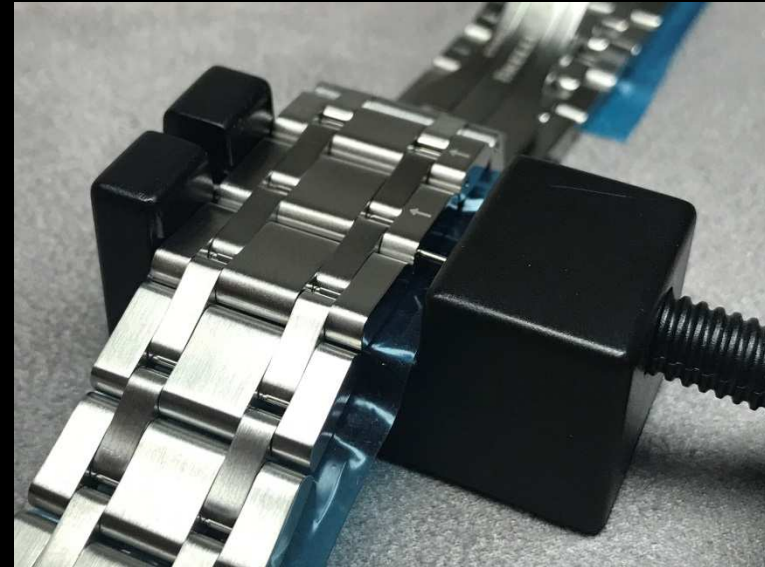

6. position the bracelet on the flat part of the plastic tool and recenter the pin inside the link